


HANDLEIDING

ORION®



HIDDEN LED PANEL

IL-P595K30 / IL-P595K40 / IL-P195K30 / IL-P195K40
220-240VAC 50/60Hz 28W IP20


INTER LIGHT

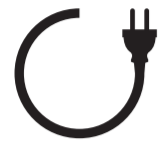

Total power: 28W
LED power: 25W
Lumen: 3600lm
Color temperature: 4000K
RA/CRI: 80
IP rating: IP20
Flicker free
UGR: 16
Lifetime: 50.000 hour

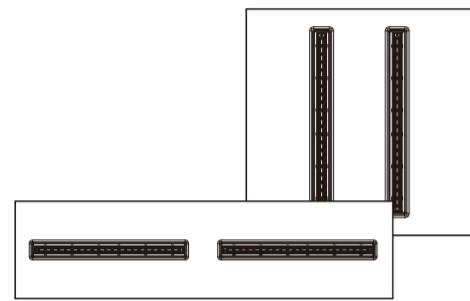
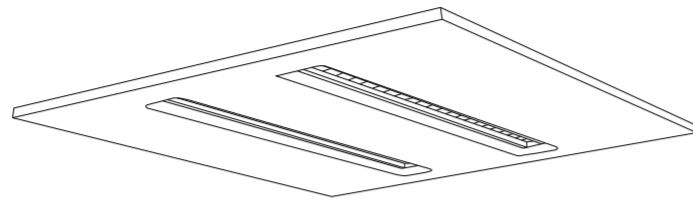


IL-P595K30 / IL-P595K40
IL-P195K30 / IL-P195K40

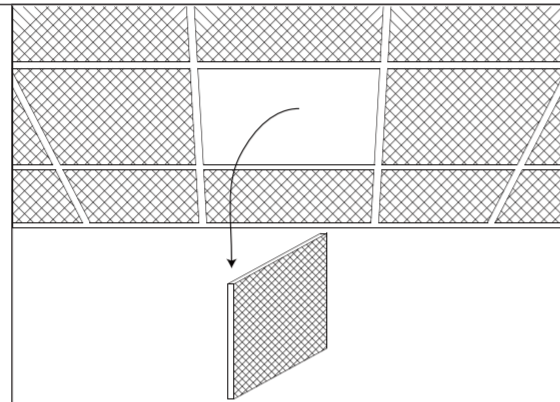


1. Sluit de stroom af en creëer de ruimte voor het LED paneel.

IL-P595K30 / IL-P595K40

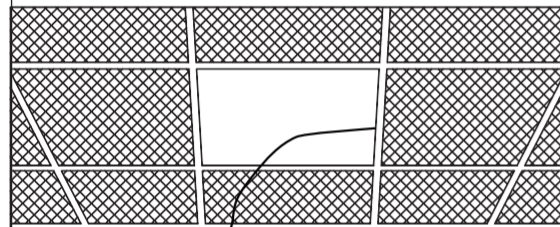
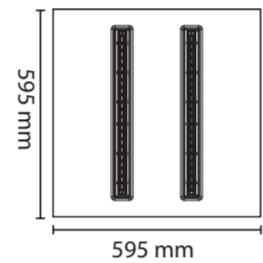


2. Verwijder het kapje van de driver en sluit de driver aan.

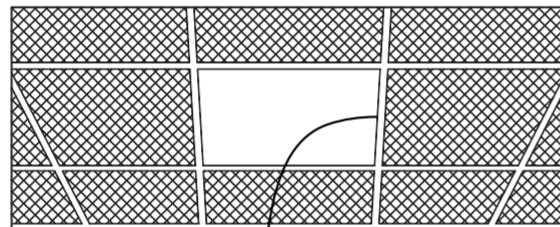


3. Sluit de driver aan op het LED paneel.

IL-P195K30 / IL-P195K40

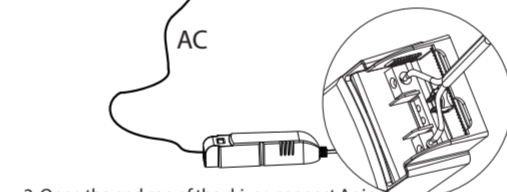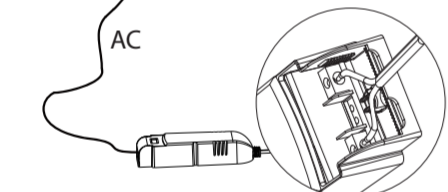


2. Open the end cap of the driver, connect Ac input of the driver to the line voltage

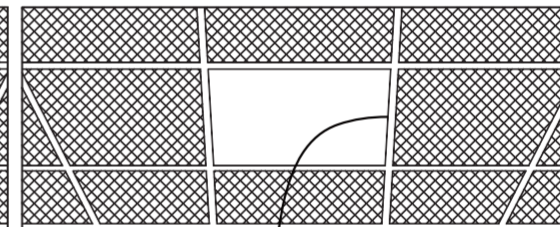


3. Connect the input of the DC wire of the panel with the output DC of the driver.

IL-P195K30 / IL-P195K40

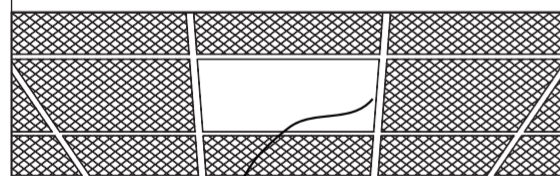


4. Plaats het LED paneel in het plafond.

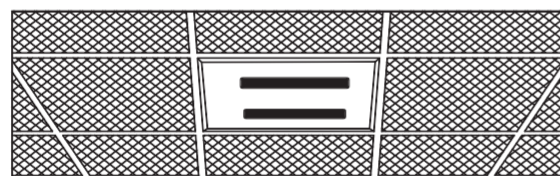

5. Nu kan het LED paneel ingeschakeld worden.

WAARSCHUWING:

 Dit product mag alleen geïnstalleerd worden door een erkend installateur.
Sluit de stroom af voor aanvang van de installatie.
Hou brandbaar en ontvlambaar materiaal weg bij de driver en het paneel.
Draag veiligheidshandschoenen en bril bij de installatie.
Kijk nooit rechtstreeks in de lichtbron.
Ondersteun het paneel altijd.
Zorg ervoor dat het paneel volledig is afgekoeld voordat u begint met het onderhoud.



www.koopmaninterlight.nl


INSTRUCTION MANUAL

ORION®



HIDDEN LED PANEL

220-240VAC 50/60Hz 28W IP20


INTER LIGHT

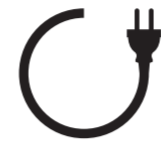

Total power: 28W
LED power: 25W
Lumen: 3600lm
Color temperature: 4000K
RA/CRI: 80
IP rating: IP20
Flicker free
UGR: 16
Lifetime: 50.000 hour

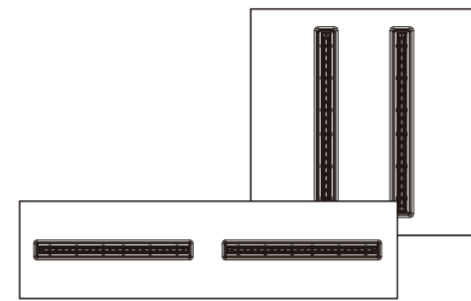
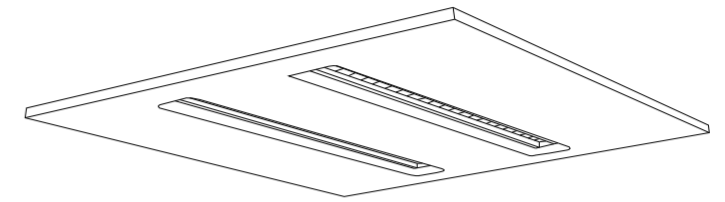


IL-P595K30 / IL-P595K40
IL-P195K30 / IL-P195K40

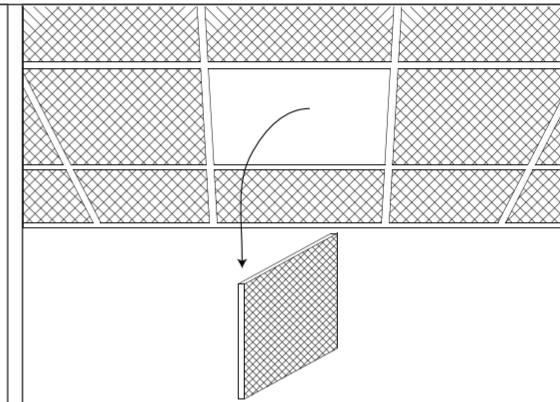


1. turn off the power, take one ceiling off

IL-P595K30 / IL-P595K40

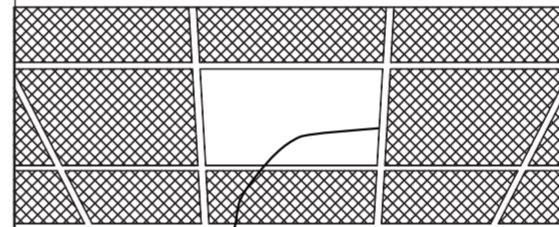
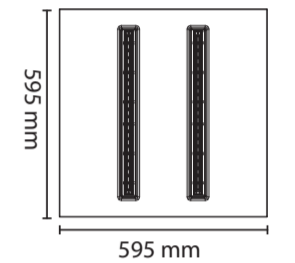


2. Open the end cap of the driver, connect Ac input of the driver to the line voltage

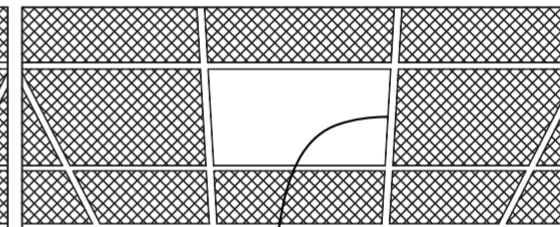


3. Connect the input of the DC wire of the panel with the output DC of the driver.

IL-P195K30 / IL-P195K40

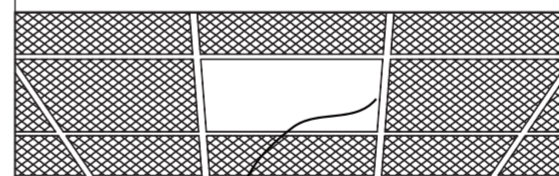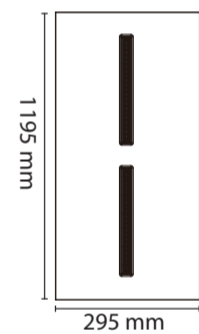


4. Insert the fixture through an opening in the ceiling grid

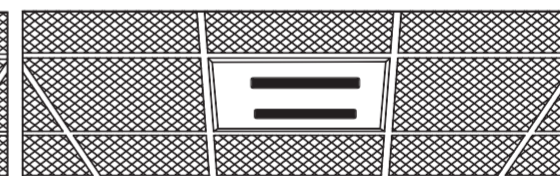

5. When the entire fixture is above the ceiling grid, move the fixture into position so the metal frame of the light fixture is flat, level, and equally supported on all four sides by the T-bar grid. Turn on the light.

 WARNING
1. The manufacturer will not be held responsible for improper installation, faulty or improper use and unauthorized alteration of the luminaire. If changes of the product is required, consult the dealer for advice.



www.koopmaninterlight.nl