
 


Structure:

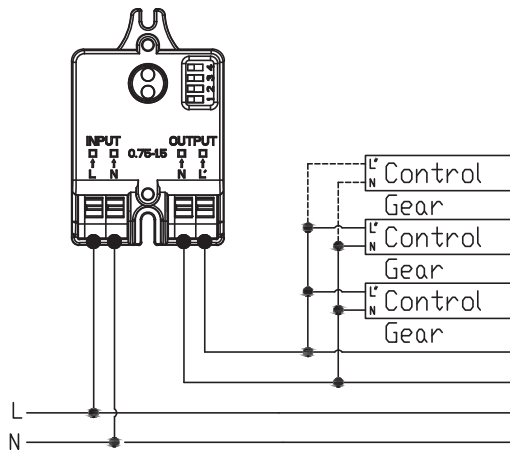

DIP Switch settings:



Daylight Function Daglicht Functie

ATTENTION! To change the sensor settings the PCB must be unscrewed to have access to the dipswitches (follow the instructions manual STEP 1-STEP 4).

	1	2	3	4	ON	OFF
I	ON	ON	ON	ON	5lux	25lux
II	ON	ON	ON	-	10lux	50lux
III	ON	ON	-	ON	25lux	75lux
IV	ON	ON	-	-	50lux	100lux
V	ON	-	ON	-	100lux	200lux
VI	ON	-	-	-	150lux	300lux
VII	-	ON	-	-	200lux	400lux
VIII	-	-	-	-	Disable	

When the lux level is below selected setting of 5, 10, 25, 50, 100, 150 or 200 lux (night/dusk) the lamp turns on. At dawn when the lux level is above 25, 50, 75, 100, 200, 300 or 400 lux the lamp will turn off and remain off. The lamp will not turn on during daytime.

Factory Setting:

IV - ON: 50lux OFF: 100lux

Warning

- Only qualified electrician is allowed to do installation, maintenance and inspection for safety concern. It is dangerous for non-professional operators.
- Power should be cut off before installation, maintenance or inspection.
- Please install and use the product strictly according to the instruction.
- Do not disassemble or remold the product at will to avoid accident of electric shock or light falling.
- Working out of temperature range of -20 ~ +50 will shorten the lifetime of the product.

