
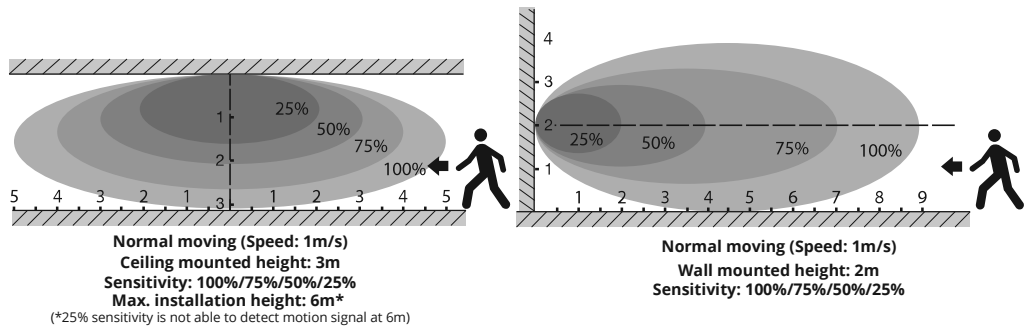


Motion Sensor

⚠ Only applicable for versions with
...-/ S
...-/ SN

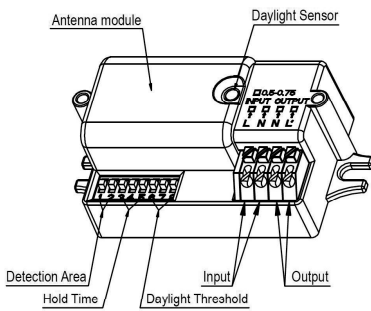

DIP Switch settings:

Detection Area (Sensitivity):



	1	2	
I	ON	ON	100%
II	ON	OFF	75%
III	OFF	ON	50%
IV	OFF	OFF	25%



	3	4	5	
I	ON	ON	ON	5s
II	ON	ON	OFF	30s
III	ON	OFF	ON	1min
IV	ON	OFF	OFF	3min
V	OFF	ON	ON	5min
VI	OFF	ON	OFF	10min
VII	OFF	OFF	ON	20min
VIII	OFF	OFF	OFF	30min


Daylight Threshold:

	6	7	8	
I	ON	ON	ON	2lux
II	ON	ON	OFF	10lux
III	OFF	ON	OFF	25lux
IV	ON	OFF	OFF	50lux
V	OFF	OFF	OFF	Disable*

* Disable. The luminaire turns on when motion is detected, regardless the daylight lux levels.

Daylight Sensor


⚠ Only applicable for versions with
...-/ DS
...-/ DSN

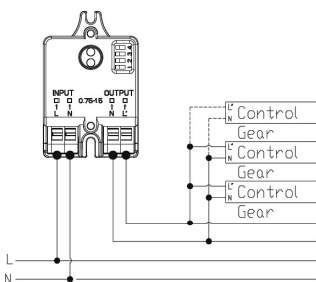

DIP Switch settings:

Hold time:

When the lux level is below selected setting of 5, 10, 25, 50, 100, 150 or 200 lux (night/dusk) the lamp turns on. At dawn when the lux level is above 25, 50, 75, 100, 200, 300 or 400 lux the lamp will turn off and remain off. The lamp will not turn on during daytime.



	1	2	3	4	Open (On)	Close (Off)
I	ON	ON	ON	ON	5lux	25lux
II	ON	ON	ON	OFF	10lux	50lux
III	ON	ON	OFF	ON	25lux	75lux
IV	ON	ON	OFF	OFF	50lux	100lux
V	ON	OFF	ON	OFF	100lux	200lux
VI	ON	OFF	OFF	OFF	150lux	300lux
VII	OFF	ON	OFF	OFF	200lux	400lux
VIII	OFF	OFF	OFF	OFF	Disable	